
Contents

About this manual	vii
Important safety information	vii
Online support	viii
Support telephone numbers	viii
Chapter 1. General information.	1
The IBM Documentation CD	3
Hardware and software requirements	3
Using the Documentation Browser	3
Related publications	4
Notices and statements used in this book	5
Features and specifications	5
Major components of the BladeCenter Type 8677 unit	8
Front view	9
Rear view	10
BladeCenter unit power, controls, and indicators.	11
Starting the BladeCenter unit	11
Shutting down the BladeCenter unit	12
BladeCenter components, controls, and LEDs	13
Setting up the BladeCenter unit.	17
Connecting to the default IP address on a new BladeCenter	19
Registering and profiling the BladeCenter products	19
Chapter 2. Configuring your BladeCenter unit	21
BladeCenter unit power requirement	22
BladeCenter power configuration	22
Firmware updates	22
Configuring the BladeCenter unit	23
Configuring the management module.	23
Communicating with the IBM Director software	23
Configuring I/O modules	24
Configuring blade servers	24
Using IBM Director	24
About the wizard	25
Starting the wizard	25
Using Remote Deployment Manager Version 4.1 or later	26
BladeCenter networking guidelines	26
Chapter 3. Diagnostics	29
Diagnostic tools overview	29
Identifying problems using the Light Path Diagnostics feature	29
Chapter 4. Installing options	31
Installing the BladeCenter unit in a rack.	31
Installation guidelines	31
System reliability considerations	32
Handling static-sensitive devices	32
Installing and removing modules	33
The BladeCenter modules.	33
Installing a module	37
Removing a module	38
Installing and removing the acoustic module option	40
Installing the acoustic module option	40

Removing the acoustic module option	41
Installing and removing blade servers	41
Blade server expansion options	41
Installing a blade server	43
Removing a blade server	45
Completing the installation.	46
Input/output connectors	46
Chapter 5. Service replaceable units	47
Replacing a blower module	47
Media tray	48
Removing the media tray	48
Removing the media-tray cover.	48
Optical or diskette drive.	49
Installing SuSE to a SCSI drive	50
Customer interface card and USB connector	50
CD interposer board	51
Switch, power, and cooling (SPC) chassis	52
Media-cable tray	53
Midplane	55
System LED panel	55
Front system LED panel	55
Rear system-LED panel	56
Chapter 6. Symptom-to-FRU index	57
Error symptoms	57
Light Path Diagnostics table	69
Temperature error messages.	70
Blower error messages	70
Power error messages	71
Blade server error messages.	72
KVM error message	72
I/O module error messages	72
Management-module error messages	73
Bus error messages	74
Undetermined problems	75
Problem determination tips	76
Chapter 7. Parts listing, BladeCenter Type 8677.	77
Front view	77
Rear view.	78
Appendix A. Getting help and technical assistance	83
Before you call	83
Using the documentation	83
Getting help and information from the World Wide Web	83
Software service and support	84
Hardware service and support	84
IBM Taiwan product service	84
Appendix B. Related service information	85
Safety information.	85
General safety	85
Electrical safety.	86
Safety inspection guide	87
Handling electrostatic discharge-sensitive devices	88

Grounding requirements	89
Safety notices (multi-lingual translations)	89
Appendix C. Notices	129
Trademarks.	129
Important notes	130
Electronic emission notices	131
Federal Communications Commission (FCC) statement	131
Industry Canada Class A emission compliance statement.	131
Avis de conformité à la réglementation d'Industrie Canada	131
Australia and New Zealand Class A statement	131
United Kingdom telecommunications safety requirement	131
European Union EMC Directive conformance statement	131
Taiwanese Class A warning statement	132
Chinese Class A warning statement.	132
Japanese Voluntary Control Council for Interference (VCCI) statement	132
Korean Class A warning statement	133
Power cords	133
Index	135